



Optoma China Co. Ltd.  
5F., No 1205, Kai Xuan Rd., Changning District, Shanghai, 200052  
800 Tel: 800-820-8150  
Fax: 021-6282-6621  
[www.optoma.com.cn](http://www.optoma.com.cn)

Optoma Corporation  
5F., No 108, Minchiuan Rd., Xindian City, Taipei 231  
Tel: 886-2-2218-2360  
Fax: 886-2-2218-2313  
[www.optoma.com.tw](http://www.optoma.com.tw)

Optoma USA  
715 Sycamore Drive  
Milpitas, CA 95035 USA  
Tel : 408-383-3700  
Fax: 408-383-3702  
[www.optomausa.com](http://www.optomausa.com)

Optoma Europe Ltd.  
42 Caxton Way  
The Watford Business Park  
Watford Hertfordshire WD18 8QZ UK  
Tel: +44 (0) 1923 691 800  
Fax: +44 (0) 1923 691 888  
[www.optoma.co.uk](http://www.optoma.co.uk)



 
## Installation Guide for Panoview Manual Pull-Down Screen

**NOTE:**

1. Panoview pull down screen may be mounted on wall, map rails, suspended from ceiling or extension brackets. Screen must be mounted level and with the case-back parallel to the wall.
2. Whichever method is used, the screen should be free to swing forward and back and not be twisted rigidly. Mount the screen so that bottom of picture surface, when fully extended, will be above heads of viewers.

**Accessories**

- Installation guide \_English version(one piece)
- Limited Warranty card(one piece)
- Wall Fixture Screw Assembly

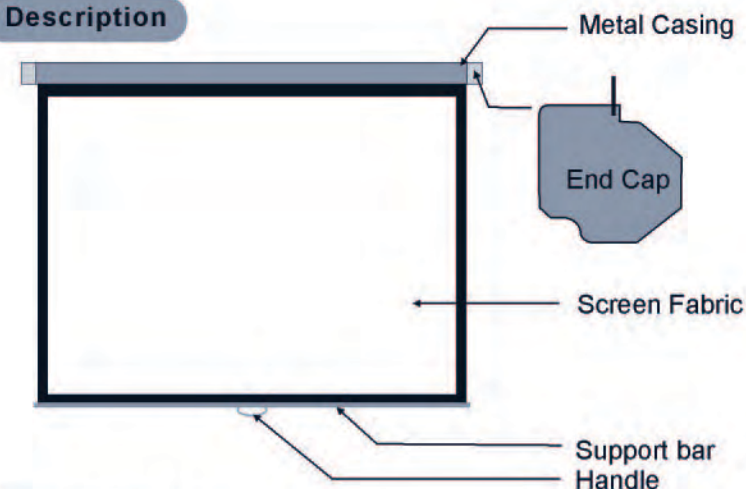**Description****Product Safety**

To ensure your safety, please read "Product Manual and Warnings"


- The ceiling or wall used for fixture installation must be secure to prevent the screens from falling.
- Please read the following as any damage to the screen surface will affect the quality of the picture:
  1. Avoid contact or touching the screen surface as it may cause scratches or tears.
  2. Do not write or draw on the surface
  3. Clean the screen with a soft cloth and lukewarm water. Do not use any detergent or cleaning products.
- Roll up the screen after every use.
- Ensure that the screen is level when installing; do not pull on the sides or fold the screen.
- To prevent unnecessary damage, the operating and maintenance of the screen should be done by adults.



## Instructions

Pull down to the desired height; the screen will self-lock.

1. Use rope to pull down bottom rod until within hand reach distance.
2. Continue to pull down with hand to desired height.
3. To pull down lightly to release locking system, and do NOT rewind the screen by hasty releasing.

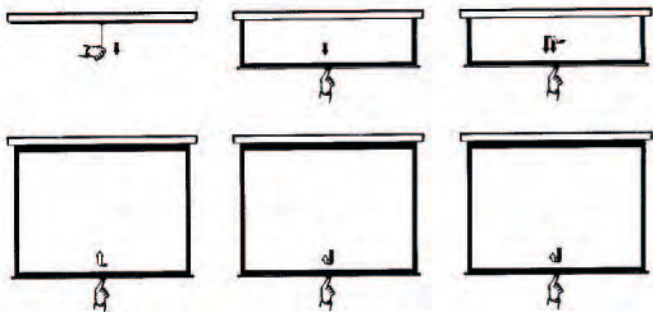

## Warnings



To retract screen, pull down lightly to release locking system and do NOT rewind the screen by hasty releasing.



Ignoring the safety warnings may lead to injuries and /or damaging the product.



Please contact your local dealer for repairs or maintenance. Please contact our company if you have any further questions. Avoid taking apart the fixtures yourself. Loose parts may cause the screen to fall.



Fixtures should be installed in a secure place to avoid accidents or the screen falling.



Roll up the screen after every use. Leaving it hanging for a long period of time may cause the fabric to loosen.


Panoview



Do not take apart and replace with unknown parts. If there are any problems, please contact your local dealer. Product specifications are subject to change.

## Installation

1. This projection screen should be installed at the best possible viewing position for the audience. Take out all the parts from the packaging and follow the accessories guideline to ensure you have all the parts. The parts needed will vary depending on which installation you choose to use.
2. For installation on a wood wall or ceiling, please use anchors and screws.

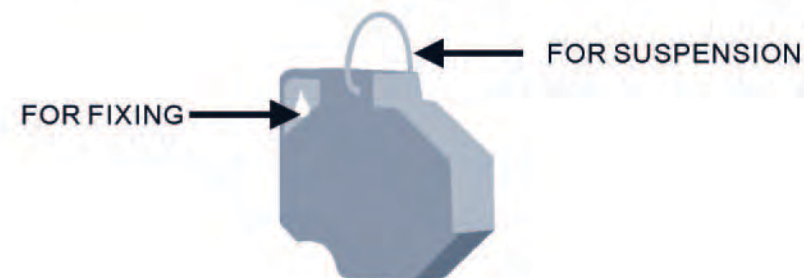

## Wall Mount

Use the keyhole slot at the back of the hanging bracket for flush wall suspension. Position screws or other fasteners into wall and hang screen by using slots.

## Ceiling Mount

Use the keyhole slot in flat brackets. If the screen is to be ceiling mounted, two screw hooks placed in a beam or other solid surface will do the job.

Panoview